



AVANA KING SINGLE, DOUBLE & QUEEN BEDS



1. Kindly remove everything from the packaging and lay all the pieces side by side, then organise all the hardware parts neatly

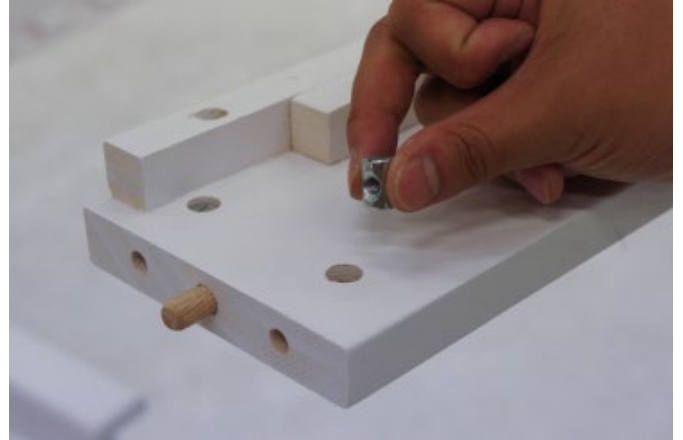

2. Gather the bed rails and at the end of the rail insert the round barrel nut into the 2 holes as shown above, ensuring the hole faces forwards.

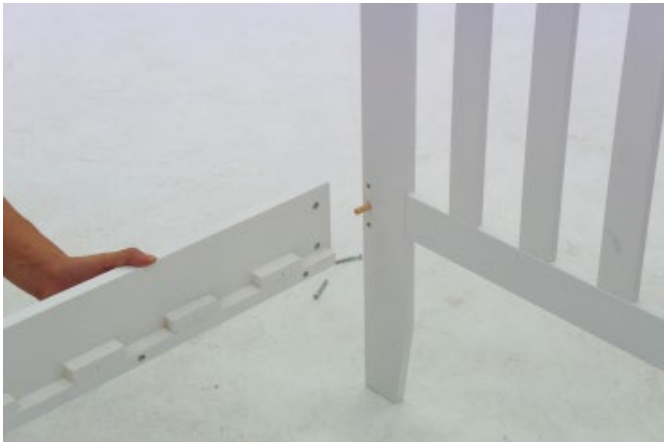

3. Gently raise the bed rail and line it up with the bed head and insert the wooden dowel either on the end of the rail or on the bed head.



4. Insert the two long metal bolts from behind the bed head until they meet the barrel nuts and turn to tighten



5. Use the Alan Key provided in the hardware pack to firmly tighten the metal bolts, please ensure you do not over tighten




6. Gently rest the first bed rail on the floor and then locate the footboard of the bed




7. Position the footboard of the bed in place and gently raise the rail up and repeat steps 3-5



8. Once the first the bed rail has been assembled repeat steps 2-7 and assemble the second bed rail

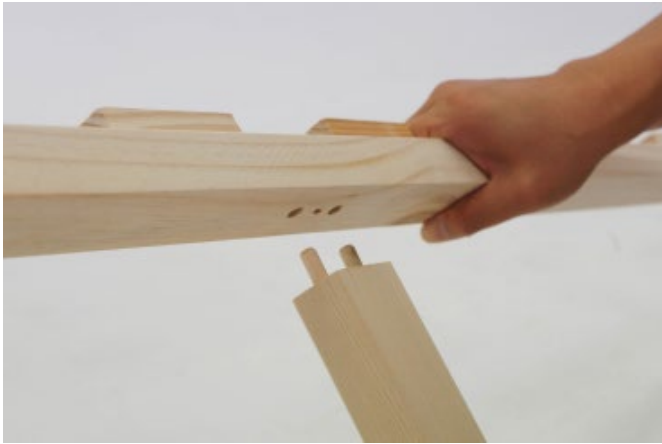


9. Gather the centre support rail and support legs, insert 2 thinner wooden dowels to the timber legs and connect them to the bottom of the centre support rail.

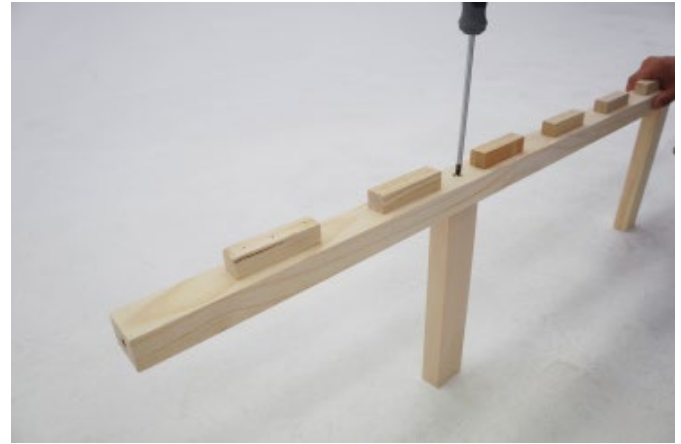


10. **INSERT** a screw through the hole positioned at the top of the centre support rail, **TURN & FULLY TIGHTEN** with screwdriver to secure the legs below (**Important**). Repeat for all **3 legs**.



11. Identify the **top** end of the centre support rail with a screw hole. If your bed comes with **Triangular Grooves**, please ensure the **triangular** grooves on the support rail meet the **triangular** grooves on both side rails. If they do not please swap the rails around.

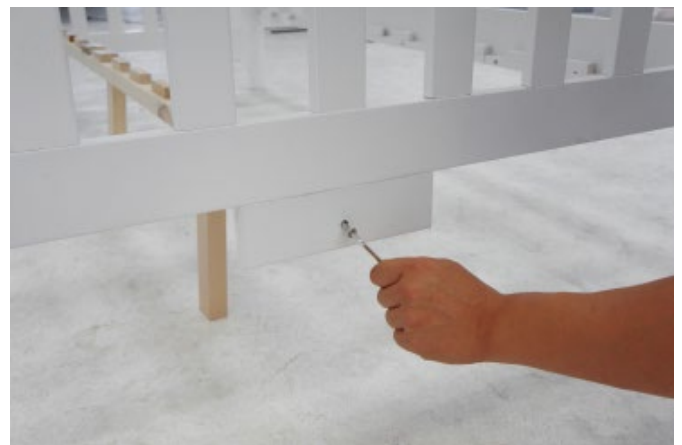

12. After ensuring all the grooves align. Connect the top end of the centre support rail with the panel beneath the bead head, fit the small metal bolt through the hole and tighten.

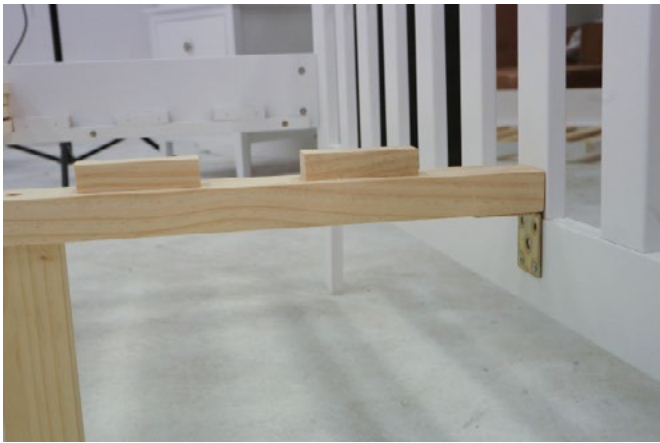

13. On the other end of the centre support rail align the end of the rail with the foot board of the bed.



14. Use the small screws in the hardware pack and screw one side of the metal bracket into the foot-board and the other side to the bottom end of the centre support rail.



15. Once both bed rails & centre support rail have been assembled, carefully lay all the bed slats onto the grooves of the rails



16. To **secure** the frame of the bed in position, ensure you **TIGHTEN** the screws manually located on the slats positioned at the very **top & bottom** ends of the bed and another in the **centre**.



17. Please note not all the slats are required to be fixed to the bed as long as the **top middle and bottom** slats are secured